

Technical Notes

Ammeter

The next time you are going to connect a trickle charger to boost your battery, connect negative clip to one terminal of the junction box on the firewall and the positive clip to a good ground, such as a cylinder head nut. A connection to one of the wing nuts will allow a reading on the cars ammeter while the other one will not show a reading.